

METAL INDENTING WHEEL INSTALLATION INSTRUCTIONS


© Panduit Corp. 2006

MIW – Metal Intending Wheels (used with MIM094, MIM125 or MIM187 Metal Indenting Machines)



- MIW094 - 3/32" (2.38mm) character wheel kit
- MIW125 - 1/8" (3.18mm) character wheel kit
- MIW187 - 3/16" (4.77mm) character wheel kit

❖ MIW Wheel Kits include: Indenting Wheel, Spacer Rack and three (3) Screws

CHANGING METAL INDENTING WHEEL (CHARACTER DIAL), SPACING RACK REMOVAL / INSTALLATION

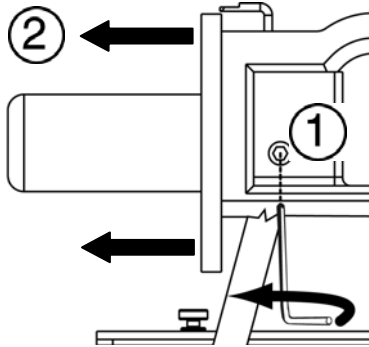

Choose desired character dial and re-install.

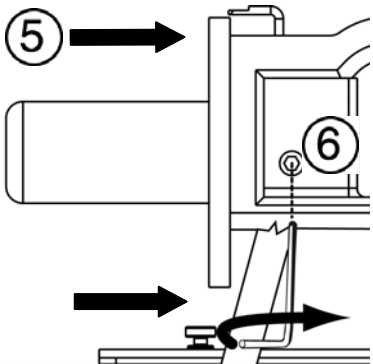
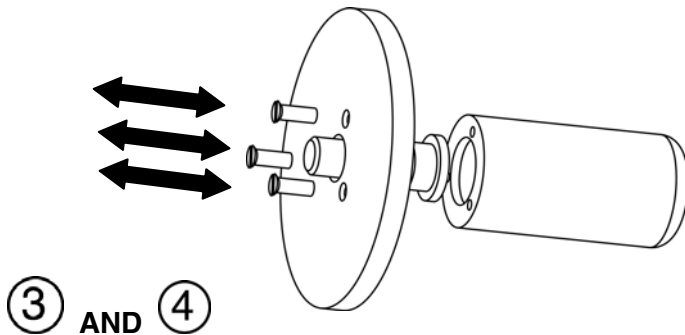


DO NOT OVERTIGHTEN SET SCREW



The character dial should turn easily, but should not have forward or backward play.

Website: www.panduit.com
E-mail: cs@panduit.com



Technical Support:
888-506-5400, ext. 3255
Fax: (630) 759-7532

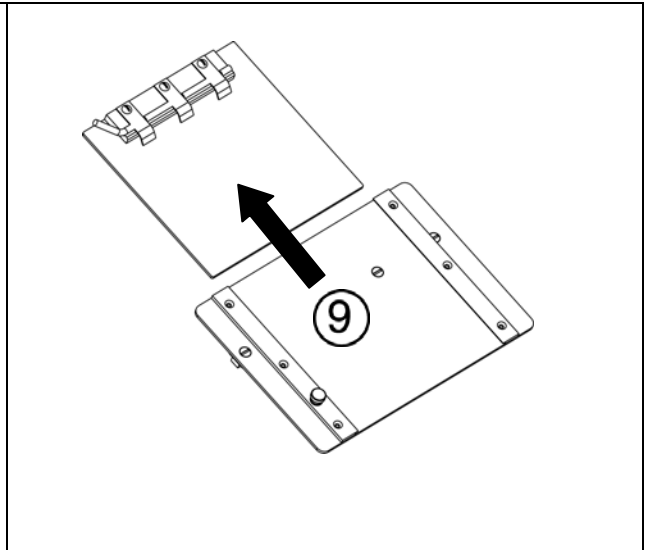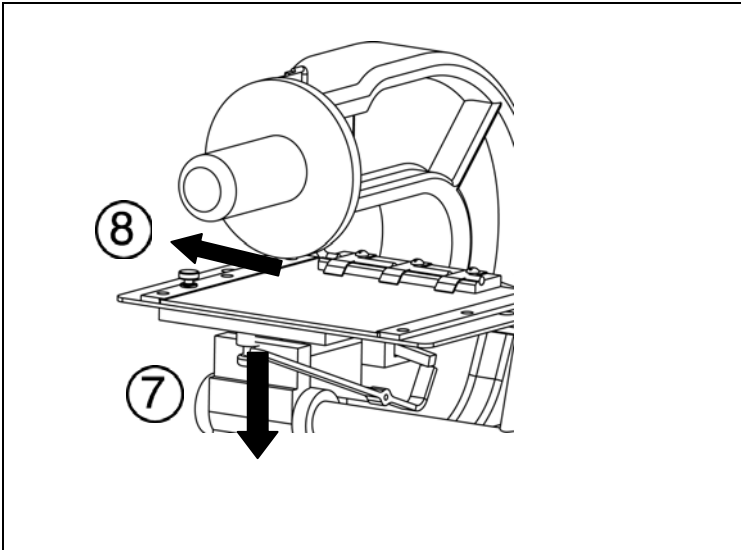

* Select the mating rack for the installed character dial. Slightly tighten screws.

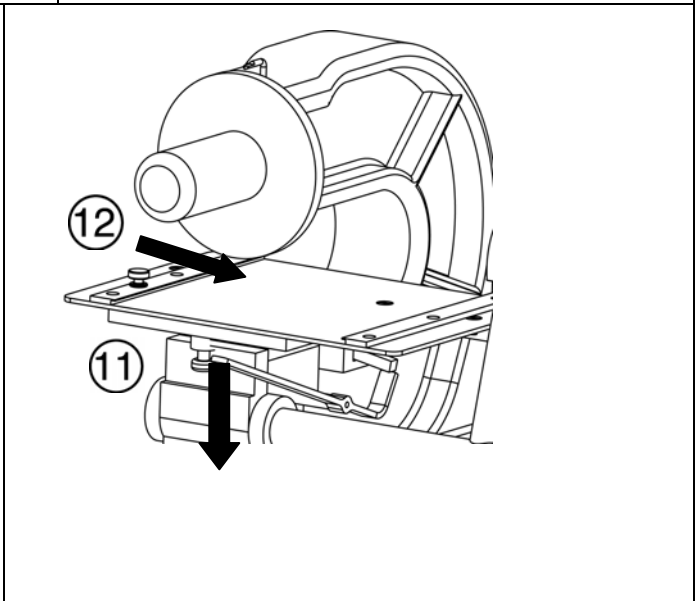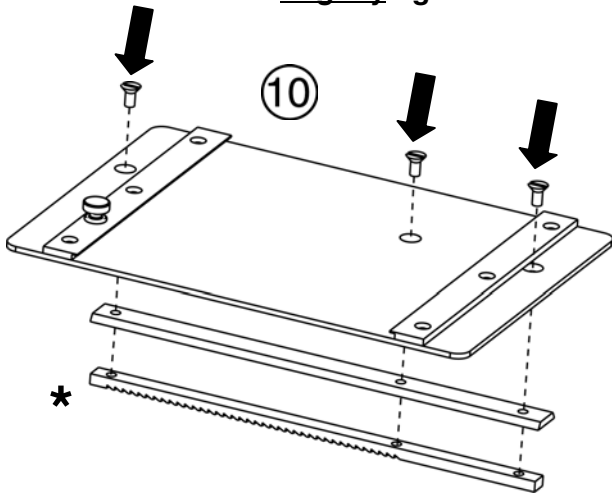

(13) Tighten screws securely, in order (after table is placed back onto press).

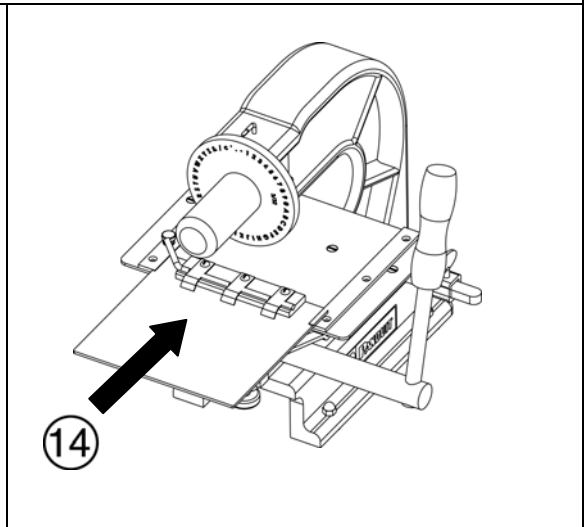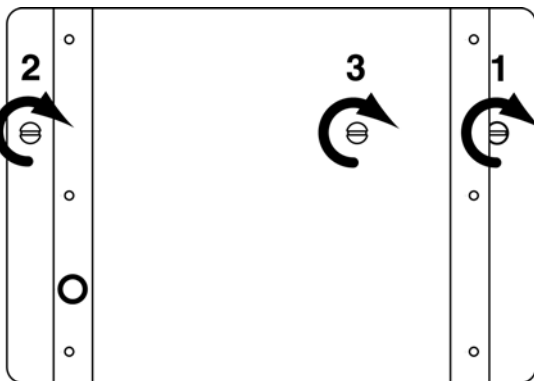

Resume operation.